

PURA PRONTO & FRESCO

Descaling Instructions



Read the descaling instruction before you operate the machine. Keep the descaling instructions near the machine.





Your responsibility for the perfect coffee experience

The perfect coffee experience depends on a perfectly maintained coffee machine. Increase the quality of your products! Descal your coffee machine at least once a year or after every 30,000 products, or more frequently if necessary. Always use a water filter to increase the service life of your coffee machine.




Information:

- Actions required are displayed on the display.
- Tasks that have been completed are identified with a check mark (✓).
- Installations with a water connection, drip tray connection or grounds ejection may deviate from the process described here.
- Descaling takes approx. 2-½ hours.

Accessories required:


- Decalcification solution
- Collection container: capacity min. 3.5 liters, max. height 160 mm (not included).

We recommend the following sequence of steps:

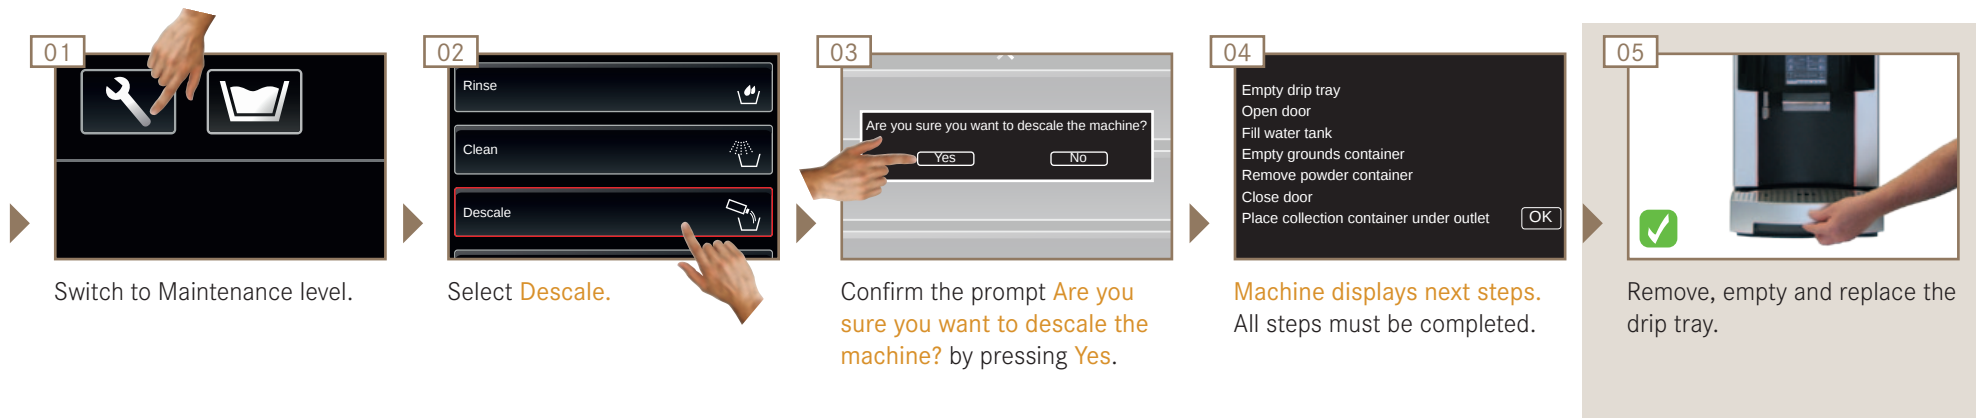




Press the release button and open the door.

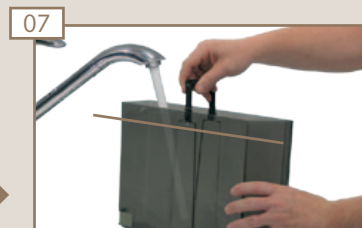

Remove water tank and fill with water up to fill mark.



Insert water tank into the machine.

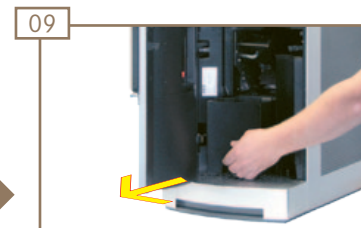

Remove and empty grounds container with drip tray.



Replace grounds container with drip tray.

CAUTION

Powder may clump!
Hot steam may cause powder to clump and come into contact with the descaling solution. Remove the powder container according to the instructions.



Pull red unlocking lever forward.



Push powder container forward to limit stop and pull straight up to remove.




Close door.




Place collection container under the outlet and hot water outlet.

WARNING


Risk of scalding!
from hot water and hot steam. Do not touch the outlets or the area under the outlets.

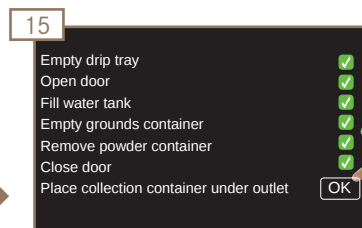

Confirm the completed task by pressing **OK**.

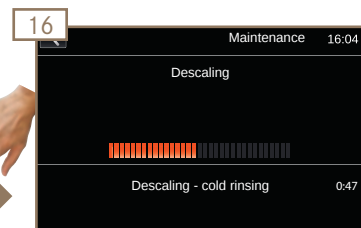

Machine rinses.

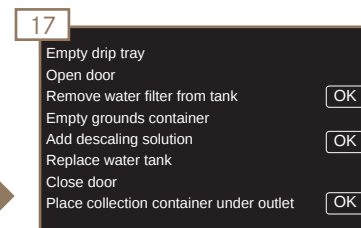


Machine displays next steps. All steps must be completed.



Remove and empty the collection container.

19



Remove, empty and replace the drip tray.

20



Press the release button and open the door.

21



Remove the water tank and empty it if necessary.

22



Remove the water filter from the adapter by turning it counterclockwise.

23



Remove and empty grounds container with drip tray.

24




Replace grounds container with drip tray.

25




Fill water tank up to fill mark with descaling solution.

26




Insert water tank into the machine.

27




Close door.

28




Place collection container under the outlet and hot water outlet.

29

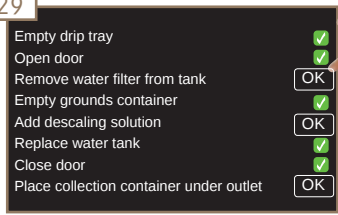


Confirm completed tasks by pressing **OK**.

30

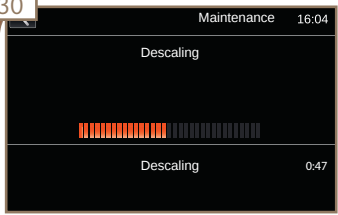


The machine is being descaled.

31

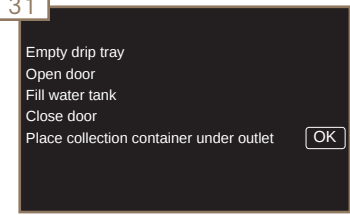


Machine displays next steps. All steps must be completed.

32



Remove and empty the collection container.

33



Remove, empty and replace the drip tray.




34 Press the release button and open the door.



35 Remove the water tank and rinse it thoroughly.



36 Fill water tank up to fill mark with water.

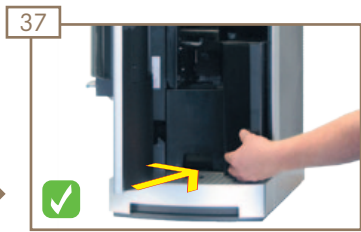


37 Insert water tank into the machine.




38 Close door.



39 Place collection container under the outlet and hot water outlet.

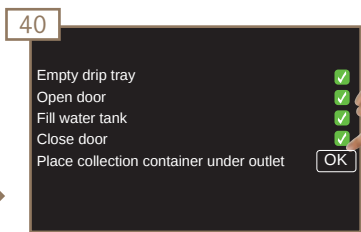

40 Confirm the completed task by pressing **OK**.

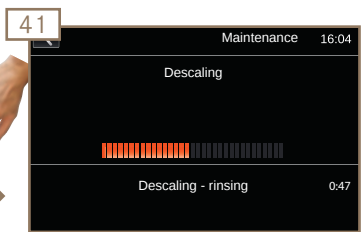


41 Machine rinses.




If necessary, the drip tray must be emptied and the water tank filled. Follow the instructions on the machine.


Empty drip tray:

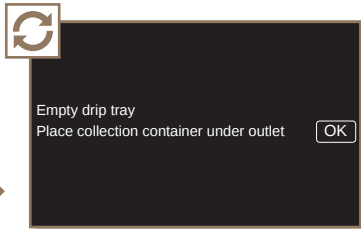

Machine displays next steps. All steps must be completed.

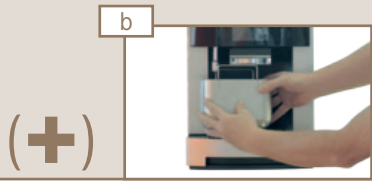

Remove and empty the collection container.

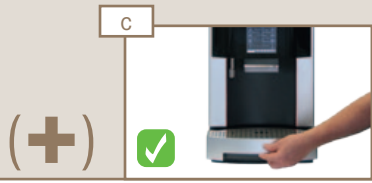

Remove, empty and replace the drip tray.




Place collection container under the outlet and hot water outlet.




Confirm completed tasks by pressing **OK**.


Empty the drip tray and fill the water tank:

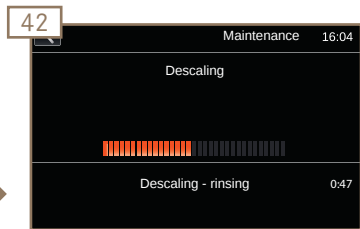


Machine rinses.

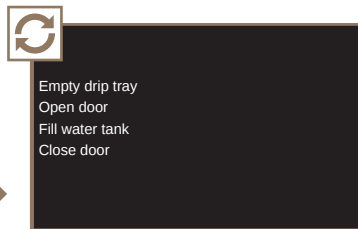


Machine displays next steps. All steps must be completed.

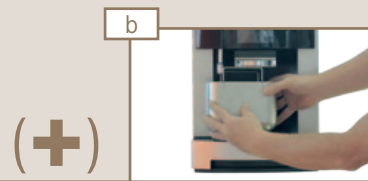

Remove and empty the collection container.

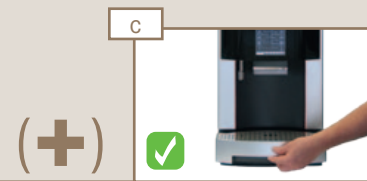


Remove, empty and replace the drip tray.

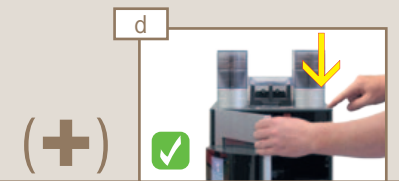


Press the release button and open the door.




Remove water tank and fill up to fill mark.

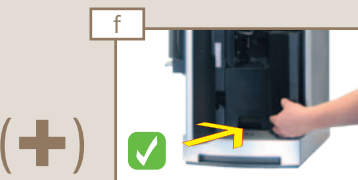

Insert water tank into the machine.

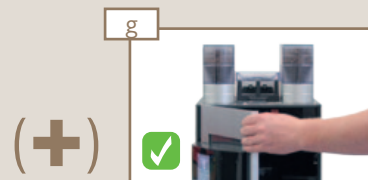


Close door.

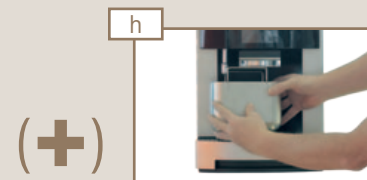


Place collection container under the outlet and hot water outlet.



Confirm the completed task by pressing OK.

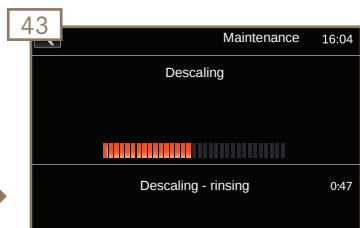

Machine rinses.

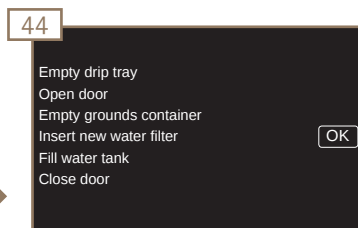

Machine displays next steps. All steps must be completed.



Remove and empty the collection container.



Remove, empty and replace the drip tray.



Press the release button and open the door.



Remove and empty grounds container with drip tray.



Replace grounds container with drip tray.



Remove the water tank and empty it if necessary.



Insert a new water filter.



Fill water tank up to fill mark.

See operating instructions for the chapter on Cleaning, Rinsing and Servicing.




Insert water tank into the machine.




Close door.

WARNING


Risk of scalding! from hot steam. Do not touch the outlets or the area under the outlets.

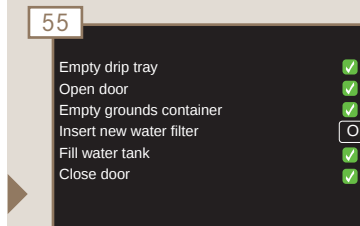


Confirm completed tasks by pressing OK.

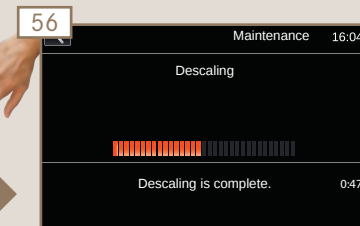


Machine adjusts water level in steam boiler.

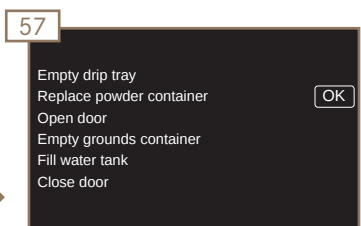

Machine displays next steps. All steps must be completed.

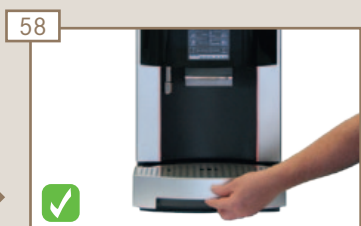

Remove, empty and replace the drip tray.

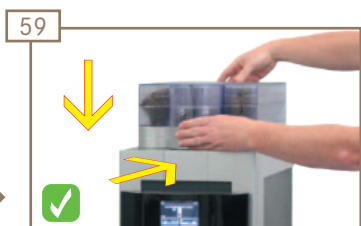

Place the powder container on the machine and slide it back to the limit stop.



Press the release button and open the door.



Remove and empty grounds container with drip tray.



Replace grounds container with drip tray.




Fill water tank up to fill mark.




Insert water tank into the machine.



Close door.

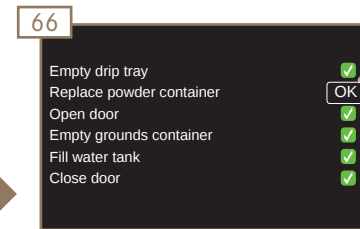

Confirm completed tasks by pressing **OK**.

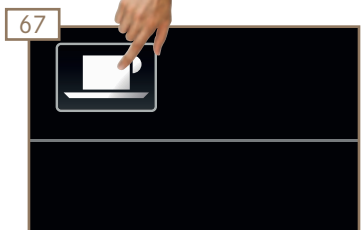

Descaling is complete;
switch to Product level.



Information on inserting and rinsing the water filter can be found in the Pura operating instructions (item number 1N330004), chapter Cleaning, Rinsing and Servicing.

РУССКИЙ ПРОЕКТ®
www.rp.ru

125424, г. Москва, Волоколамское шоссе, д. 88, стр. 8
Тел./факс: +74955404600